

## Slide-hammer valve lifter



### Description:

- For removing valve springs.
- The slide hammer is used to free split collets.
- Diameter: 34 mm.

	Length L [mm]	Height H [mm]	Length [mm]	Weight [Kg]
U.43LA	200.0	36.0	390.0	1.4