

Injector gaskets slide hammer



Description:

- To pull injector gaskets blocked at the bottom of the injector well.
- Avoids cylinder head removal.



Weight [Kg]

DCR.SR

1.63